




# HOW TO ASSEMBLE YOUR TALISMAN SIEVE

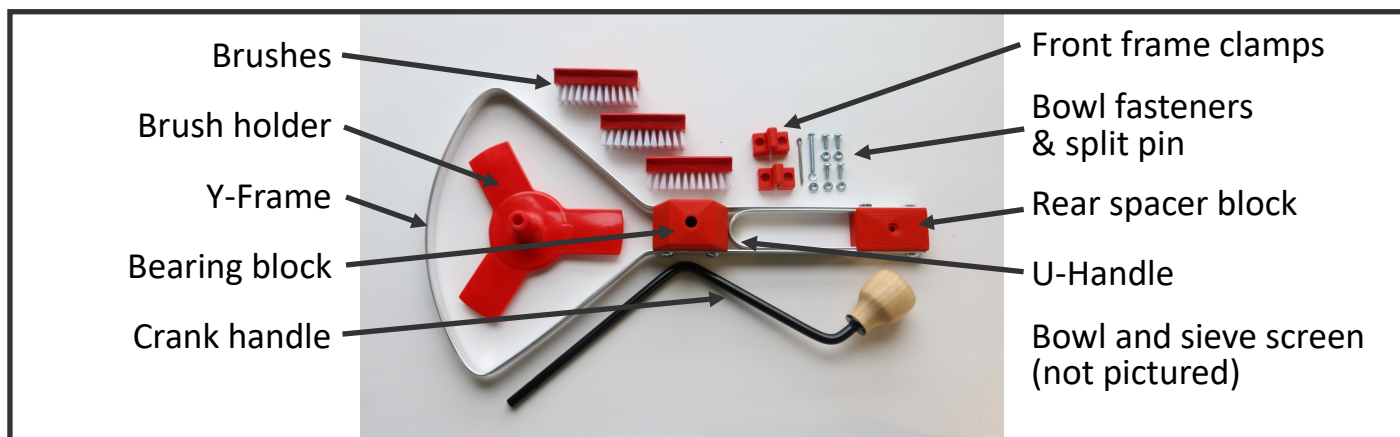


1. Remove the bolts through the rear spacer block.

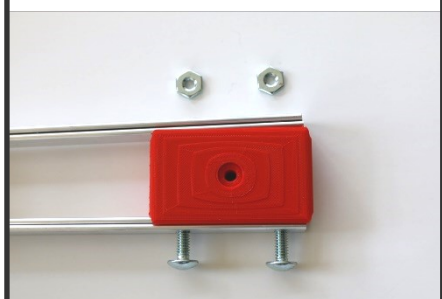


2. Turn the U-handle around. The handle goes inside frame.

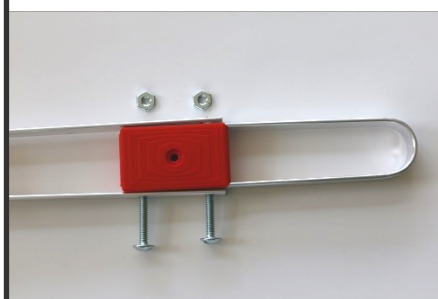

3. Reinsert and tighten the bolts.

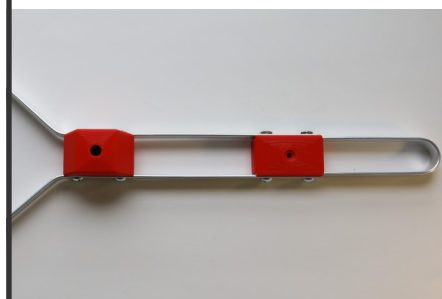

4. Insert the crank handle down through the bearing block.

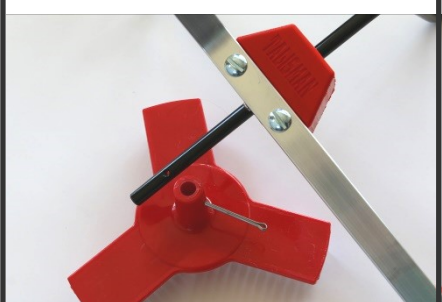


5. Push brush assembly onto crank handle and align holes.




6. Insert the split pin and bend the ends around either side.



7. Insert long bolt and washer through spacer and bowl. Add nut and tighten.

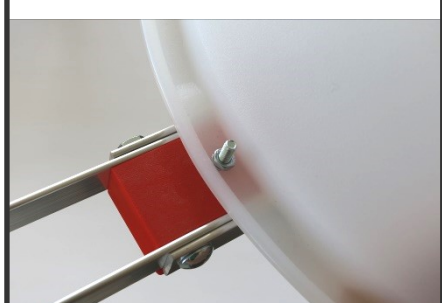

8. Insert short bolts through front frame clamps and bowl holes. Add nuts and tighten.

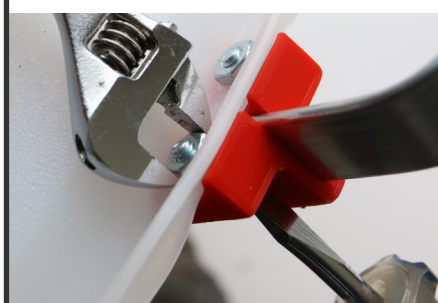

9. Push the sieve screen into place, being careful to push on the rubber outsides only.

